



Items	Frequency *1									
	× 1,000 mi	0.6	4	8	12	16	20	24	Regular Replace	Refer to page
	× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4		
Fuel Line				I		I		I		-
Throttle Operation				I		I		I		112
Air Cleaner *2					R			R		92
Crankcase Breather *3			C	C	C	C	C	C		113
Spark Plug	Every 16,000 mi (25,600 km): I, Every 32,000 mi (51,200 km): R									
Valve Clearance								I		-
Engine Oil		R		R		R		R	1 Year	96
Engine Oil Filter		R				R				98
Engine Idle Speed				I		I		I		-
Radiator Coolant *5				I		I		I	3 Years	100
Cooling System				I		I		I		-
Secondary Air Supply System						I				-
Evaporative Emission Control System *4						I				-

Maintenance Level

-  : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (P. 158).
-  : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

Maintenance Legend

- I** : Inspect (clean, adjust, lubricate, or replace, if necessary)
- R** : Replace
- L** : Lubricate
- C** : Clean