

### NOTICE

When installing a wheel or caliper into original position, carefully fit the brake disc between the pads to avoid scratching them.

10. Lower the front wheel on the ground.
11. Apply the brake lever several times. Then, pump the fork several times.
12. Retighten the right axle pinch bolts.

**Torque:** 16 lbf·ft (22 N·m, 2.2 kgf·m).

13. Raise the front wheel off the ground again, and check that the wheel rotates freely after you release the brake.
14. Uncover the protective tape or cloth.

If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.

## Rear Wheel

### Removal

1. Place your motorcycle on a firm, level surface.
2. Loosen the rear wheel nuts.
3. Support your motorcycle securely and raise the rear wheel off the ground using a hoist.
4. Remove the muffler mount bolt, washer and nut.
5. Remove the right step bracket bolt A.

