

Honda selectable torque control

Torque Control level (engine power control) can be selected or turned on/off.

- ▶ The Torque Control setting can be changed or turned off only when the riding mode is USER. **➔ P.59**
- ▶ Do not operate the Torque Control switch while riding.
Stop the motorcycle first and the turn off or on and select the desired level.
- ▶ The Torque Control setting cannot be changed or turned off when the system is activated (Torque Control indicator flashing).

- ▶ Each time the ignition switch is turned to the ON position, the Torque Control level will automatically be set to level it was set to. However, if the level was set to off, it will become Low.
- ▶ When the Torque Control is turned from the off position to the on position, it will automatically be set to Low.