

Parking	12
Parts Location	16
Passing Light Control Switch	54
PGM-FI (Programmed Fuel Injection)	
Malfunction Indicator Lamp (MIL)....	53, 124
Photosensor	143
Protective Apparel	9
R	
Rear Seat	95
Rear Suspension	119
Recommended	
Coolant	87
Engine Oil	84
Fuel	68
Refueling	68
Removal	
Battery	93
Front Seat	94
Rear Seat	95
Repair Kit	128
Reporting Safety Defects	163
Reserve Tripmeter	25
Riding Mode	59

Riding Precautions	10
Right Turn Signal Indicator	53

S

Safety Guidelines	3
Safety Labels	7
Safety Precautions	9
SEL Button	18
Shifting Gears	67
Side Stand	105
Side Stand Ignition Cut-off System	105
Specifications	164
Speedometer	19
Start Button	55, 65
Starting the Engine	65
Steering Lock	56
Stopping Engine	142
Storage	
Equipment	69
Owner's Manual	69, 142
Tool Kit	69
Storing Your Motorcycle	148
Switches	54