



# Indicators

If one of these indicators does not come on when it should, have your dealer check for problems.

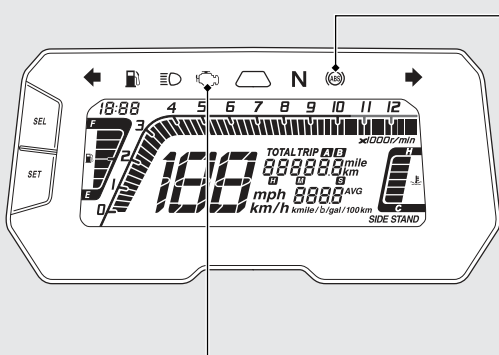

## **PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)**

Comes on briefly when the ignition switch is turned to the ON position with the engine stop switch in the  (Run) position.

**If it comes on while engine is running:**

 **P.108**

## **ABS (Anti-lock Brake System) indicator** **CB300RA only**

Comes on when the ignition switch is turned to the ON position. Goes off when your speed reaches approximately 6 mph (10 km/h).

**If it comes on while riding:**

 **P.109**