

Adjusting the Drive Chain Slack

Adjusting the chain requires special tools. Have the drive chain slack adjusted by your dealer.

CB500FA only

When adjusting the drive chain slack, be careful not to damage the wheel speed sensor and pulser ring.

1. Place the transmission in Neutral. Stop the engine.
2. Place your motorcycle on the side stand on a level surface.
3. Loosen the rear axle nut.
4. Loosen the lock nuts on both sides of the swingarm.

