


## Headlight Bulb

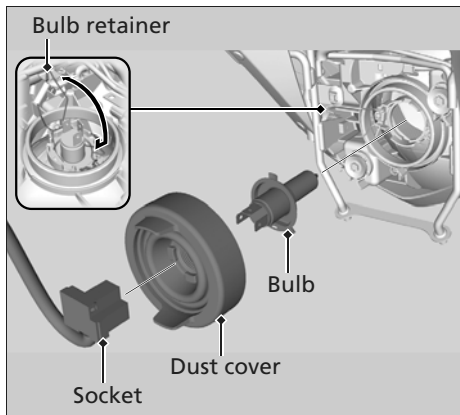

1. Remove the headlight assembly. [▶ P. 61](#)
2. Pull the socket off the bulb without turning it.
3. Remove the dust cover.
4. Unhook the bulb retainer and pull out the bulb without turning it.
5. Install a new bulb and reinstall the parts in the reverse order of removal.

Do not touch the glass surface with your fingers. If you touch the bulb with your bare hands, clean it with a cloth moistened with isopropyl (rubbing) alcohol.