


Instruments

A button

B button

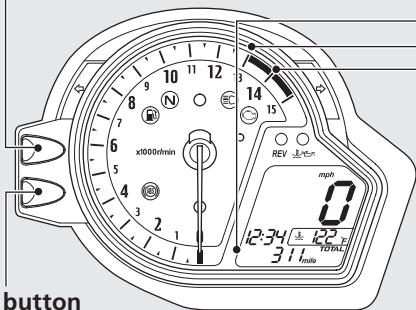

Tachometer

NOTICE

Do not operate the engine in the tachometer red zone. Excessive engine speed can adversely affect engine life.

Tachometer red zone

(excessive engine rpm range)

Changing the Speed, Mileage, Fuel Mileage and Temperature Unit

Press and hold **A** and **B** buttons to change the speed and mileage units ("mph" & "mile" & "gal" or "km/h" & "km" & "l") for the speedometer, odometer, tripmeter, fuel mileage meter and the temperature unit ("°F" or "°C") for the coolant temperature gauge.

Press **A** button to select either "mph" & "mile" & "gal" or "km/h" & "km" & "l", then press **B** button. And then press **A** button to select either "°F" or "°C", then press **B** button to set. Also you can change the indication mode of fuel mileage. ➔ P.24