



Low fuel indicator

- Comes on briefly when the ignition switch is turned ON.
- Comes on when there is only reserve fuel left in the fuel tank. Remaining fuel when low fuel indicator comes on: 0.92 US gal (3.5 liters)

► **Low fuel indicator and reserve fuel consumption display:** ➔ P.28



Warning indicator

- Comes on when the ignition switch is turned ON. Goes off when the engine starts.
- Comes on when coolant is over the specified temperature, and/or engine oil pressure is below normal operating range.

If it comes ON while riding (while engine is running): ➔ P.86 ➔ P.87



REV (Tachometer red zone) indicator

- Comes on briefly when the ignition switch is turned ON.
- Flashes/Comes on when the tachometer needle enters the red zone or reaches your selected revolution.

► **REV (Tachometer red zone) indicator setting:** ➔ P.29