


## Adjusting the Clutch Lever Freeplay

### Upper Adjustment

Attempt adjustment with the upper clutch cable adjuster first.

Turn the clutch cable adjuster until the freeplay is  $\frac{3}{8}$  to  $\frac{13}{16}$  in (10 to 20 mm).

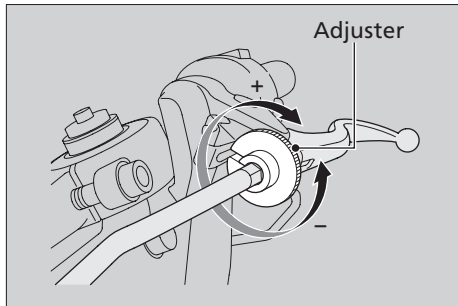

### Lower Adjustment

If the upper clutch cable adjuster is threaded out near its limit, or the correct freeplay cannot be obtained, attempt adjustment with the lower clutch cable adjusting nut.

1. Remove the lower fairing. [► P.57](#)
2. Remove the screw on the right middle fairing and pull it outwards.

