

## Instruments *(Continued)*

### Elapsed time [ELAPSED]

Displays operating time since the engine was started.

Display range: 00:00 to 99:59 (hours:minutes)

- Above 99:59: returns to 00:00.

When the ignition switch is turned to the OFF position, the elapsed time is reset.



ELAPSED  
01:30

When "--:--" is displayed, go to your dealer for service.

### Available riding distance [RANGE] (Only reserve fuel mode)

When the low fuel indicator lights and the low fuel pop-up information appears, the estimated available riding distance is indicated.

Display range: 99 to 0 mile (km)

- Above 99 mile (km): "99" is displayed.
- Below 0.2 GAL (1.0 L): "--" is displayed.

The indicated available riding distance is calculated based on the riding states, and the indicated figure may not always be the actual allowable distance.



RANGE  
20<sub>mile</sub>

When "--" is displayed except for the above-mentioned cases, go to your dealer for service.