Instruments (Continued)

Preset settings are as follows.

| Treset settings are as follows. | | | | |
|---------------------------------|-------------|---------|-------------|---------|
| | Front | | Rear | |
| | Compression | Rebound | Compression | Rebound |
| | FR COM | FR REB | RR COM | RR REB |
| M1 | 45% | 30% | 60% | 50% |
| M2 | 20% | 25% | 50% | 45% |
| М3 | 10% | 10% | 25% | 30% |

3 Press the MODE button. The selected the item setting is set, and then the display returns to the upper level hierarchy.