






SHIFT INDICATOR

You can change the setting of the shift indicators.

- 1 Select the "OFF" (deactivate) or an engine revolution at which the shift indicators start blinking using the **SEL**  (up) or **SEL**  (down) button.
 - ▶ Press and hold the **SEL**  (up) or **SEL**  (down) button to move the menu quickly.
 - ▶ The value increases by 200 r/min (rpm) increments.
 - ▶ Available setting range:
4,000 - 16,600 r/min (rpm)
- 2 Press the **MODE** button. The shift indicator setting is set, and then the display returns to the upper level hierarchy.

| 12:34 | | SETTING | 0 mph |
|----------|---|---------|---------------------------|
| FUNCTION |  | | 16400 |
| LAP TIME | DISPLAY MODE | | 16600 |
| | | | OFF |
| DISPLAY | SHIFT INDICATOR | | 4000 <small>r/min</small> |
| GENERAL | BRIGHTNESS | | 4200 |
| | | | 4400 |
| SERVICE | BACKGROUND | | 4600 |

Information of the Shift Indicator:

 P.96