

GENERAL


To Set the GENERAL Menu

- ① Select the "GENERAL" on the main menu screen. ➡ P.43
- ② Select a menu by pressing the [SEL] **▲** (up) or [SEL] **▼** (down) button and press the **MODE** button.

To end the setting

Select the **◀** (return) menu on the menu screen. The display returns to the "GENERAL" on the main menu screen.

"GENERAL" is selected

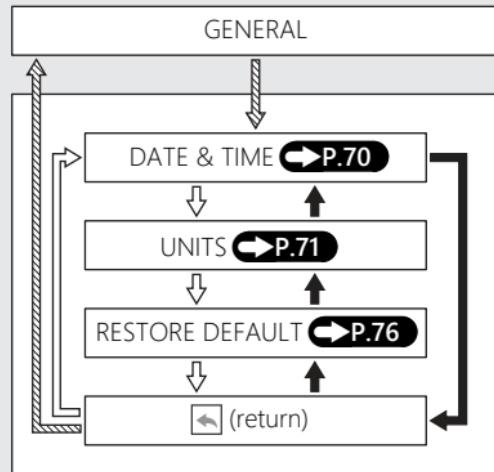

- ➡ Press the **MODE** button
- ➡ Press the **SEL** **▲** (up) button
- ➡ Press the **SEL** **▼** (up) button