



## Instruments *(Continued)*

The unit of coolant temperature gauge and information of temperature (lap data history mode and mechanic mode) is changed by "TEMP." menu.

The units of the current fuel mileage, average fuel mileage and amount of remaining fuel are changed in "FUEL CONS." menu.

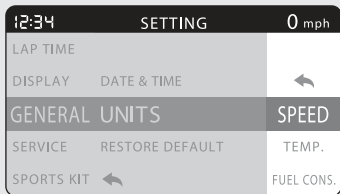

### To end the setting

Select the  (return) on the menu screen. The display returns to the "UNITS" menu on the "GENERAL" menu screen.