

## Shifting Gears *(Continued)*

### Quick Shifter

#### CBR1000S1/S2

This system enables very quick up and down shifting without clutch and throttle operations.

- ▶ This system does not function when upshifting with the throttle closed.
  - ▶ This system functions when the engine speed is more than 1,500 r/min (rpm) on upshifting or more than the idle speed on downshifting.
  - ▶ This system does not function when the clutch lever is being operated.
- If “-” is displayed on the gear position indicator, the Quick Shifter system does not operate.
  - If the Quick Shifter does not operate normally, the clutch can be used to complete the shift operation.

- The Quick Shifter can be individually turned ON (active) and OFF (deactivate), also the shift pedal load level for activating the Quick Shifter can be adjusted during up and down shifting.
- If the PGM-FI malfunction indicator lamp comes on or the gear position indicator flashes “-” in the current gear position, the Quick Shifter system may not operate. If either of the above occurs, contact your dealer as soon as possible.

### **To Change the Setting of Quick Shifter**

➡ P.45

➡ P.46