


Blown Fuse

Before handling fuses, see “Inspecting and Replacing Fuses.” ➤ P. 51

Fuse Box Fuses

1. Remove the seat. ➤ P. 61
2. Open the fuse box covers.
3. Pull the fuses out one by one with the fuse puller in the tool kit and check for a blown fuse.
Always replace a blown fuse with a spare fuse of the same rating.
4. Close the fuse box covers.
5. Reinstall the seat.

CBR650F

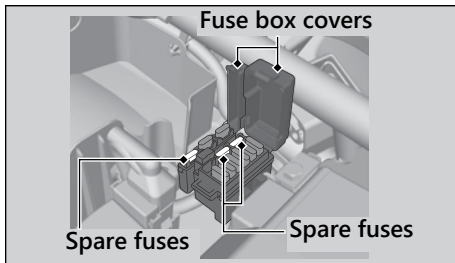

CBR650FA

