

Ignition Switch

Switches the electrical system on/off, locks the steering.

u Key can be removed when in the OFF or LOCK position.

Steering Lock: ➔ P.54


Rear ABS switch

Switches the ABS function on the rear wheel on/off. ➔ P.55

G switch

Switches the G switch on/off. ➔ P.56

Engine stop switch/**START** button

Should normally remain in the  (Run) position.

u In an emergency, switch to the  (Stop) position to stop the engine.

N-D Switch

To shift between Neutral and AT MODE. ➔ P.77

Hazard switch

Switchable when the ignition switch is turned to the ON position.

