

Instruments *(Continued)*

Page 4:

Page 4 shows the setting values of the following items.

- ABS function on the rear wheel [ABS RR] display **P.59**
- Honda Selectable Torque Control level [HSTC] display **P.60**
- Wheelie Control level [W] display **P.61**
- **CRF1100A4/D4**
Rear suspension preload level [PRELOAD] display **P.62**
- **CRF1100D/D4**
G switch [G] display **P.63**

