


Instruments *(Continued)*

- 1 Select [Favorite Switch], and then press the **ENT** switch.
- 2 Press the ▲ sel up switch or ▼ sel down switch to select your desired mode.

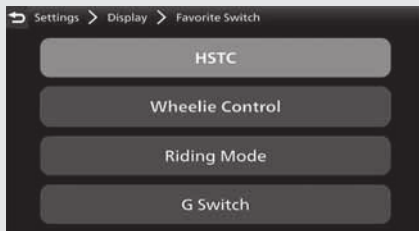

- 3 Return to the riding information, previous screen or Home screen. **P.38**

You can also perform the above settings by using the touch screen.

Available settings: [HSTC]/
[Wheelie Control]/[Riding Mode]/
[G Switch] **CRF1100D/D4**

Default: [HSTC]