


Instruments *(Continued)*

- 4 Return to the riding information, previous screen or Home screen. 

You can also perform the above settings by using the touch screen.

VOLUME level range:

Other than Microphone: Level 0 to 30

Microphone: Level 0 to 14



Default:

- Music: 7
- Phone: 7
- System: 7
- Ringtone: 7
- Voice: 7
- CarPlay: 7
- Microphone: 7

Language

Changes the system language.



- 1 Select [Language], and then press the **ENT** switch.
- 2 Press the  sel up switch or  sel down switch to select the display language that you want to use on the screen.