

Instruments *(Continued)*

- To advance the distance, month or year: Press the ▲ sel up switch, and then press the **ENT** switch until the desired value is displayed.
To delay the distance, month or year: Press the ▼ sel down switch, and then press the **ENT** switch until the desired value is displayed.
- u Press and hold the **ENT** switch to advance the figure fast.



- 4 Return to the riding information, previous screen or Home screen. **P.38**

You can also perform the above settings by using the touch screen.

Setting range:

- Periodic Maintenance:
 - Distance: 100 to 4,000 mile or 100 to 6,400 km
 - Date: 2000/JAN to 2099/DEC
- Oil Change:
 - Distance: 100 to 8,000 mile or 100 to 12,800 km
 - Date: 2000/JAN to 2099/DEC

Default:

- Periodic Maintenance:
 - Distance: "-----"
 - Date: "----/----"
- Oil Change:
 - Distance: "-----"
 - Date: "----/----"