



Right handlebar switch

Engine stop switch/

START button

Should normally remain in the  (Run) position.

- u In an emergency, switch to the  (Stop) position to stop the engine.
- u To start the engine.

 P.200


AT/MT switch

CRF1100D/D4

To shift between the AT MODE and MT MODE.

 P.207

Cruise control main switch


Press to activate the cruise control system.  P.210

Function sel switch


Press to display the pop-up information on the multi-information display.

N-D switch

CRF1100D/D4

To shift between Neutral and AT MODE.  P.207

Cruise control lever

Push up or down to set the speed or adjust the set speed.  P.212

