

## Changing between Neutral and AT MODE/MT MODE

### Changing from Neutral (N) to AT MODE

Press the **D-S** side of the N-D switch (a ).  
The D mode indicator comes on and first gear is selected.

### Changing from AT or MT MODE to Neutral

Press **N** on the N-D switch (b ).

### Changing between D mode and S mode while in AT MODE

Press the **D-S** side of the N-D switch. The S or D is shown in the gear position indicator (c , d ).

## Changing between AT MODE and MT MODE

Press the AT/MT switch (e ).

The AT indicator goes out while MT MODE is selected (f ).

The gear position is displayed on the gear position indicator while MT MODE is selected (f ).

