

# Starting & Stopping the Engine

---

## Flooded Engine

If the engine fails to start after repeated attempts, it may be flooded with excess fuel. To clear a flooded engine:

### Using The Start Button

1. Open the throttle fully.
2. Press the start button for 5 seconds.
3. Follow the normal engine starting procedure (page 31).

### Using The Kickstarter

1. Turn the engine stop switch to ☒ (STOP).
2. Open the throttle fully.
3. Crank the engine several times with the kickstarter.
4. Turn the engine stop switch to ○ (RUN).
5. Follow the normal engine starting procedure (page 31).

## Bank Angle Sensor Ignition Cut-off System

Your motorcycle's banking (lean angle) sensor system is designed to automatically stop the engine and fuel pump if the motorcycle is overturned.