

Starting & Stopping the Engine

How to Stop the Engine

To stop the engine, shift into neutral, and turn the ignition switch to the ○ (OFF) position.