## Tire Puncture ► Removing Wheels

- **5.** Remove the rear axle shaft, washer, right side collar, left side collar and rear wheel.
  - Support the brake caliper assembly so that it doesn't hang from the brake hose. Do not twist the brake hose.
  - Avoid getting grease, oil, or dirt on the disc or pad surfaces.
  - ▶ Do not push the brake pedal while the brake caliper assembly is removed.

## Installation

- **1.** To install the rear wheel, reverse the removal procedure.
  - ► Take care to prevent the brake caliper from scratching the wheel during installation.

## NOTICE

When installing the brake caliper into position, carefully fit the brake disc between the pads to avoid scratching them.

**2.** Make sure that the lug on the brake caliper bracket is positioned in the slot on the swingarm.

