

5 Today date setting:

- 1 Press the SEL button until the desired year is displayed.
 - ▶ Press and hold the SEL button to advance the year fast.



- 2 Press the SET button. The month digits start flashing.



- 3 Press the SEL button until the desired month is displayed.
 - ▶ Press and hold the SEL button to advance the month fast.



- 4 Press the SET button. The day digits start flashing.



- 5 Press the SEL button until the desired day is displayed.
 - ▶ Press and hold the SEL button to advance the day fast.



- 6 Press the SET button. The date is set, and the display returns to the ordinary display.