

Selecting the setting mode:

- 1 Turn the ignition switch to the ON position.
- 2 Press and hold the SEL button and SET button until the ON/OFF setting display changes.
- 3 Press the SEL button until the desired setting mode is displayed. When the SEL button is pressed, the setting mode will be changed.
- 4 When the SET button is pressed, each setting mode will be changed.

To return to the ordinary display from the setting mode:

- The SEL button and/or SET button is not pressed for about 30 seconds.
- Turn the ignition switch to the OFF position, and then to the ON position.
- Press and hold SEL button and SET button.

While operating settings, each setting will be cancelled if the SET button is not pressed.