


Starting & Stopping the Engine

Preparation

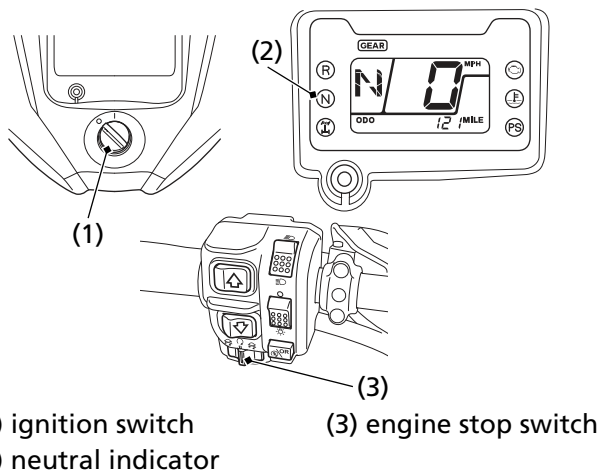

1. Before starting, make sure the vehicle is on a level surface and lock the parking brake (page 50).
2. Turn the ignition switch (1) to ON (I).

Confirm the following:

- The transmission is in neutral, and the neutral indicator (2) is ON and the gear position indicator shows "N".
- The engine stop switch (3) is set to RUN (O).