

Index

| | |
|-------------------------------|-----|
| front differential lock | 38 |
| front driveshaft boots | 194 |
| front driveshaft guards | 193 |
| front final gear oil | 151 |
| fuel, | |
| fill cap | 127 |
| gauge | 25 |
| oxygenated | 254 |
| recommendation | 136 |
| refueling | 137 |
| reserve fuel supply | 137 |
| tank capacity | 137 |
| fuses | 232 |

G

| | |
|------------------------|----------|
| gap, spark plug | 169, 245 |
| gasohol | 254 |
| gasoline | 136 |
| gear shifting | 91 |
| gearshift switch | 47 |
| guards | 193 |

H

| | |
|--|-------------|
| headlight dimmer switch | 43 |
| headlight switch | 43 |
| high coolant temperature indicator | 14, 17, 230 |
| hills, | |
| crossing or turning on slopes | 110 |
| riding down hills | 109 |
| riding up hills | 105 |
| stopping on hills | 107 |
| Honda service manual | 258 |