

Instruments & Controls

This section shows the location of all indicators and controls you would normally use before or while riding your ATV.

The items listed on this page are described in this section. Instructions for other components are presented in other sections of this manual where they will be most useful.

| | |
|--|----|
| Operation Component Locations | 11 |
| Indicators & Displays..... | 14 |
| Multi-function Display..... | 20 |
| Speed and Mileage Unit Changing..... | 22 |
| 4WD Indicator | 22 |
| Gear Position Indicator..... | 23 |
| Fuel Gauge..... | 24 |
| Digital Clock..... | 26 |
| Odometer..... | 27 |
| Tripmeter..... | 27 |
| Coolant Temperature Gauge | 28 |
| Hour meter..... | 30 |
| Maintenance Tripmeter/Maintenance Hour meter | 31 |

(cont'd)