


Indicators & Displays

Speed and Mileage Unit Changing

The speedometer, odometer, tripmeter, and maintenance tripmeter show in either “MPH” and “MILE” or “KM/H” and “KM”.

To change the speed and mileage units, press and hold the mode select button (1) for more than 5 seconds in the odometer mode (page 21) with the ATV stopped.

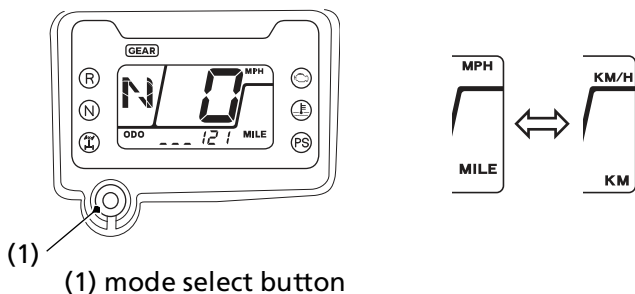

4WD Indicator

The 4WD indicator (1) shows when the 4WD mode engages (page 35).

