Quick Reference

These symbols are used in Controls & Features section:

SYMBOL	COMPONENT	SEE PAGE
q	ON — ignition switch	34
W	OFF — ignition switch	34
4WD	4WD switch	35
4wD Ű	differential lock switch	36
(I)	differential lock indicator — lights	
	when the front differential lock	36
	mode engages	
(3) ^{OR}	start/override button	39
e	RUN — engine stop switch	40
r	OFF — engine stop switch	40
у	ON — headlight switch	41
t	OFF — headlight switch	41
u	HI — headlight dimmer switch	41
i	LO — headlight dimmer switch	41
^P (≀R	parking brake/reverse lever	
	(P/R lever):	45
	P — parking brake	
	R — riding in reverse	