

FUEL TANK

▲WARNING

- *Gasoline is extremely flammable and is explosive under certain conditions.*
- *Wipe up spilled gasoline at once.*

REMOVAL

Remove the seat and side covers (page 2-2).

Turn the fuel valve OFF.

Remove the fuel tank mounting bolt and nut.

Disconnect the fuel valve vacuum tube from the intake port.


Swing the rear end of the fuel tank and disconnect the fuel tube from the fuel valve.

Disconnect the fuel tank air vent tube.

Release the fuel tank from the mounting rubbers, then remove the fuel tank upward.

NOTE:

Be careful not to damage the No.1 carburetor vacuum chamber by the fuel valve.

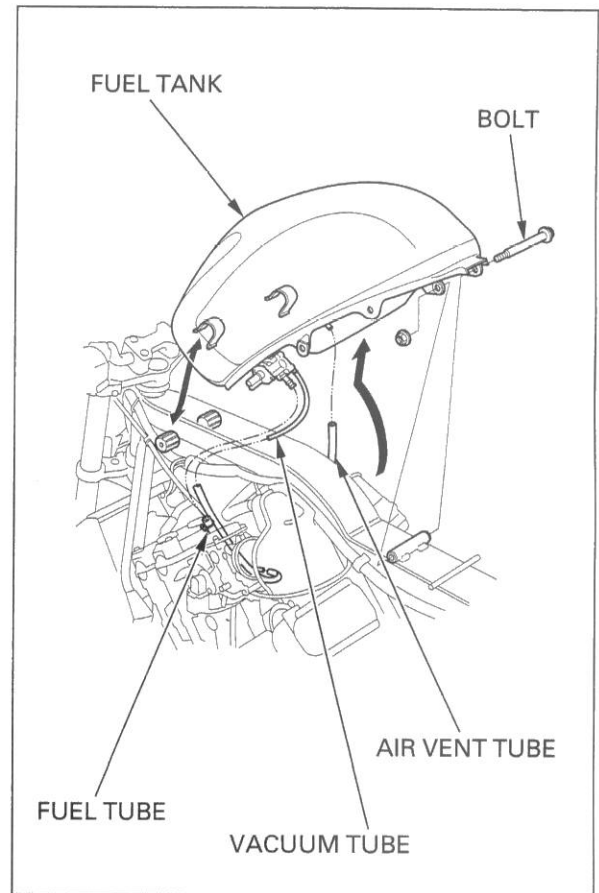

INSTALLATION


Install the fuel tank in the reverse order of removal.

Tighten the fuel tank bracket bolt to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m , 9 lbf·ft)

NOTE:

After fuel tank installation, turn the fuel valve ON and make sure there is no fuel leaks.

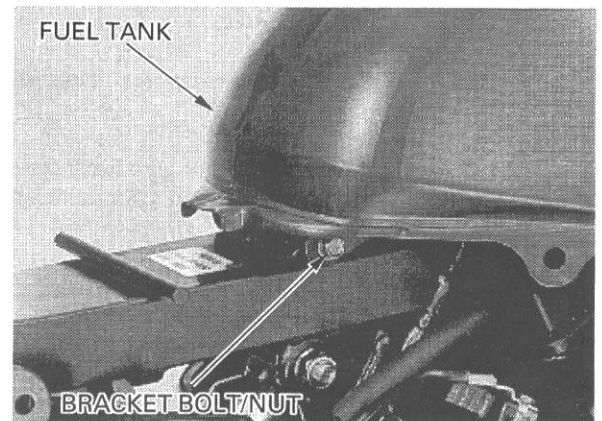

FRONT FENDER

REMOVAL/INSTALLATION

Remove the front brake hose clamp bolts.

Remove the front fender mounting bolts and front fender.

Installation is in the reverse order of removal.

Tighten the front fender mounting bolts and brake hose clamp bolt to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m , 9 lbf·ft)

