

## MAINTENANCE

Check the tires for cuts, embedded nails, or other damage.

Check the front and rear wheels for trueness (refer to section 13 and 14).

Measure the tread depth at the center of the tires. Replace the tires when the tread depth reaches the following limits.

### MINIMUM TREAD DEPTH:

**FRONT:** 1.5 mm (0.06 in)

**REAR:** 2.0 mm (0.08 in)



## STEERING HEAD BEARINGS

*Check that the control cables do not interfere with handlebar rotation.*

Support the motorcycle securely and raise the front wheel off the ground.

Check that the handlebar moves freely from side to side.

If the handlebar moves unevenly, binds, or has vertical movement, inspect the steering head bearings (Section 13).

