


OIL STRAINER/PRESSURE RELIEF VALVE

REMOVAL


Drain the engine oil (page 3-12).
Remove the exhaust pipe (page 2-5).

Remove the oil pan flange bolts and oil pan.

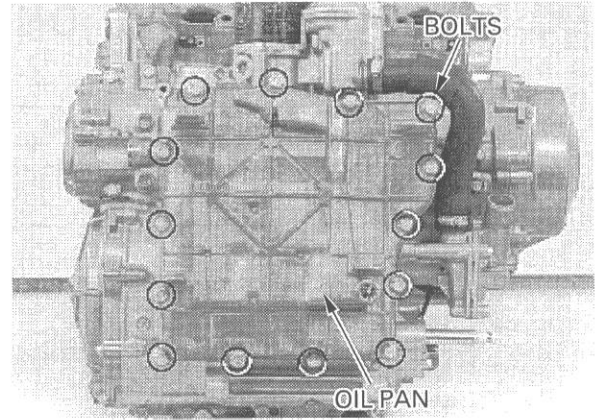


Remove the pressure relief valve and O-ring.
Remove the oil strainer and gasket.

Check the oil strainer for damage or clogging.
Clean the oil strainer screen.

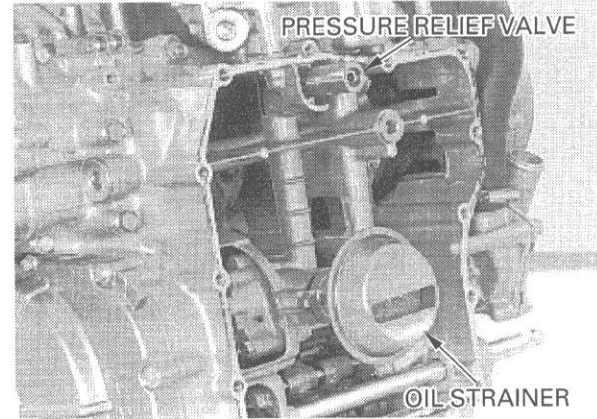

INSPECTION

Check the operation of the pressure relief valve by
pushing on the piston.
Disassemble the relief valve by removing the snap
ring.

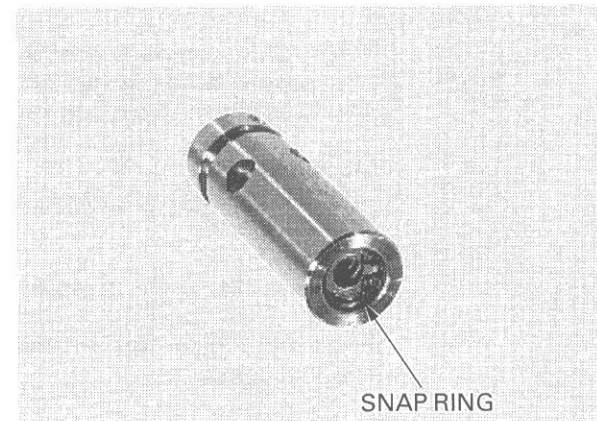

Inspect the piston for wear, sticking or damage.
Inspect the spring for weakness or damage.

Assemble the relief valve in the reverse order of
disassembly.

