

ENGINE REMOVAL/INSTALLATION

Disconnect the lower radiator hose from the water pump cover.


Disconnect the upper radiator hose from the thermostat housing.

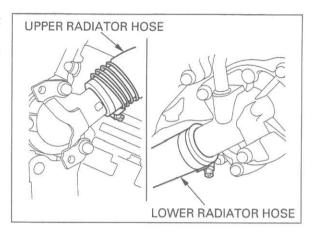

Remove the bolts and clutch cable guide.

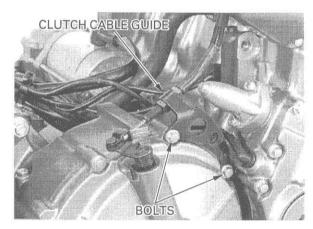

Remove the spark plug caps.

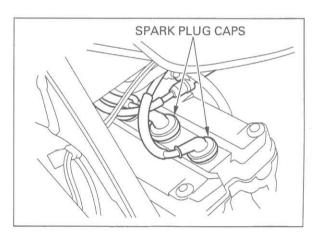

Remove the wire band.

