
## CAM CHAIN TENSIONER/CAM CHAIN GUIDE

Inspect the cam chain tensioner and guide for excessive wear or damage, replace if necessary.

 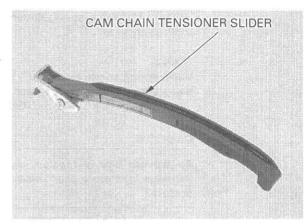


## **VALVE SPRING**

Measure the free length of the valve spring.

**SERVICE LIMIT:** 33.86 mm (1.333 in)

Replace the spring if it is shorter than the service limit.




## **VALVE LIFTER**

Inspect each valve lifter for scratches or abnormal wear.

Measure the each valve lifter O.D.

**SERVICE LIMIT:** 25.97 mm (1.022 in)

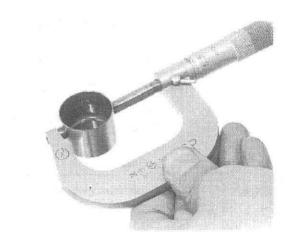

## **VALVE LIFTER BORE**

Inspect each valve lifter bore for scratches or abnormal wear.

Measure the each valve lifter bore I.D.

**SERVICE LIMIT:** 26.04 mm (1.025 in)

