



FRONT WHEEL/SUSPENSION/STEERING


Remove the fork socket bolt and sealing washer.

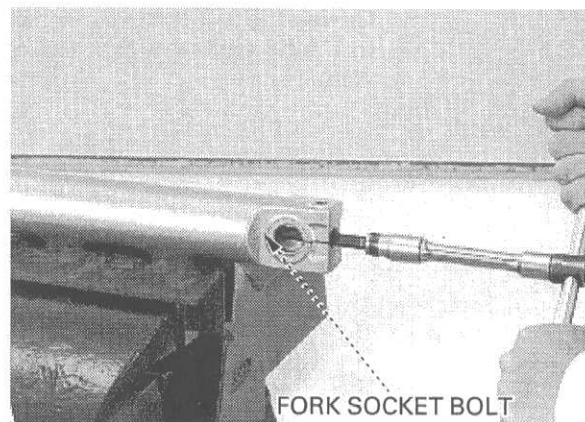

Remove the fork piston and rebound spring from the fork tube.

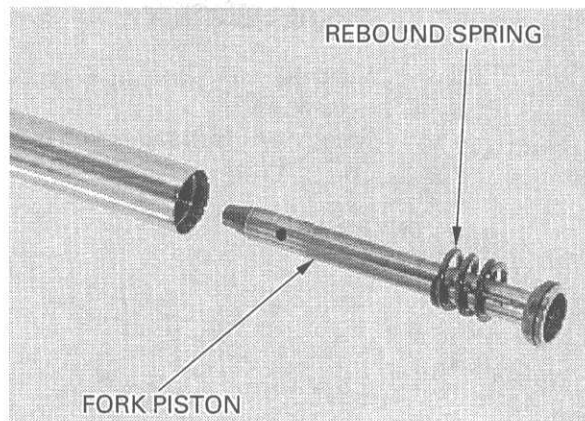

Remove the dust seal.

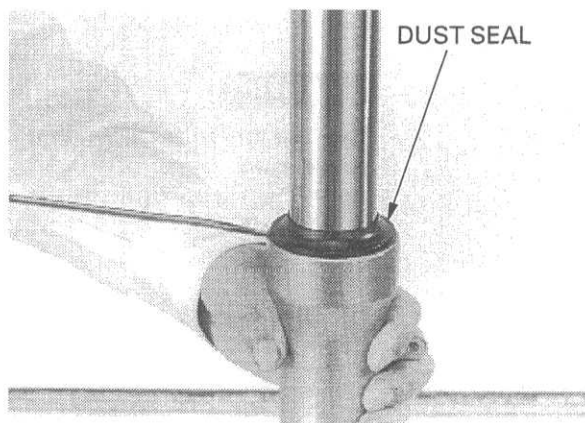

Remove the oil seal stopper ring.

