


Remove the steering stem bearing adjusting nut using the special tool.

TOOL:

Steering stem socket 07916-3710101


STEERING STEM SOCKET

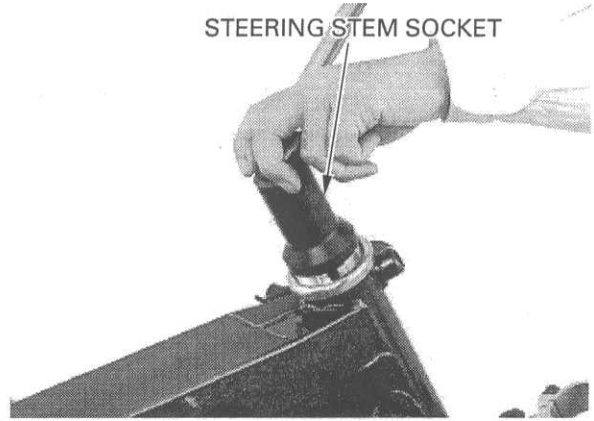

Remove the following:

- Dust seal
- Upper bearing inner race
- Upper bearing


DUST SEAL INNER RACE

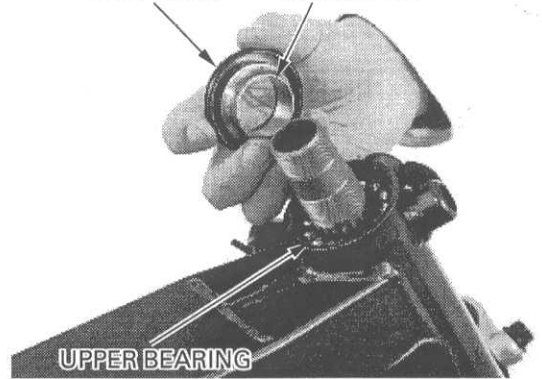

UPPER BEARING

- Steering stem
- Lower bearing

LOWER BEARING

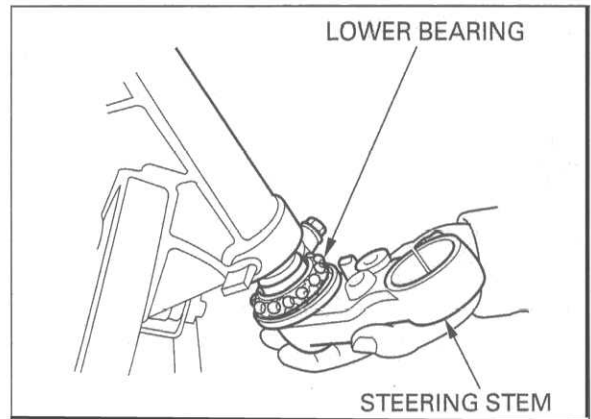

STEERING STEM

BEARING REPLACEMENT

NOTE:

Always replace the bearings and races as a set.


Remove the upper bearing outer races using the special tools.

TOOLS:

Driver attachment
Driver handle

07953-MJ10100
07953-MJ10200

ATTACHMENT

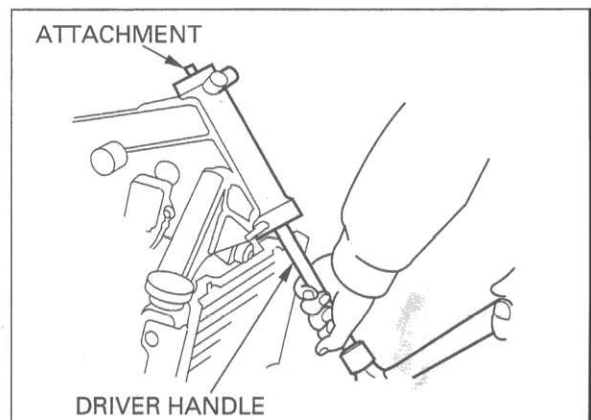

DRIVER HANDLE