

## REAR WHEEL/SUSPENSION

Press a new left pivot outer bearing (needle bearing) into the swingarm pivot using the special tools.

### TOOLS:

<b>Driver</b>	07749-0010000
<b>Attachment, 28 × 30 mm</b>	07746-1870100
<b>Pilot, 22 mm</b>	07746-0041000

### NOTE:

- Press the outer needle bearing into the swingarm with the marked side facing out.
- Install the outer bearing so that the needle bearing surface is lower 4–5 mm (0.16–0.20 in) from the end of the swingarm pivot surface.

Press new right pivot bearings (radial ball bearing) into the swingarm pivot one at a time.

### TOOLS:

<b>Driver</b>	07749-0010000
<b>Attachment, 32 × 35 mm</b>	07746-0010100
<b>Pilot, 15 mm</b>	07746-0040300

Install the snap ring into the swingarm pivot groove securely.

## SHOCK LINK PIVOT BEARING REPLACEMENT

Remove the needle bearing out of the shock link using special tool.

### TOOL:

<b>Needle bearing remover</b>	07LMC-KV30100
-------------------------------	---------------

