


# IGNITION PULSE GENERATOR ROTOR

## REMOVAL


Remove the air cleaner housing (page 5-4).

Remove the ignition pulse generator 2P (Blue) connector.


Release the wire from the wire clamp.

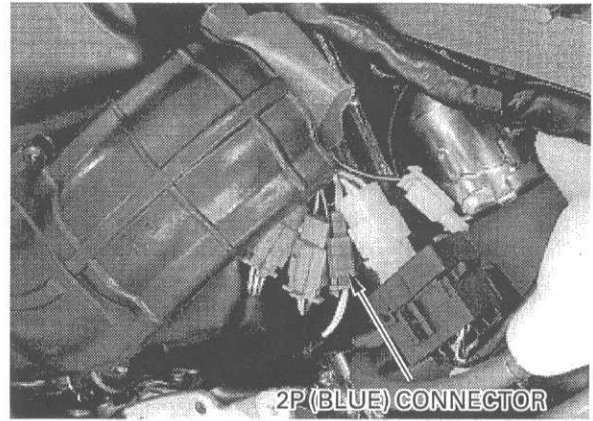

Remove the SH bolts and ignition pulse generator rotor cover.

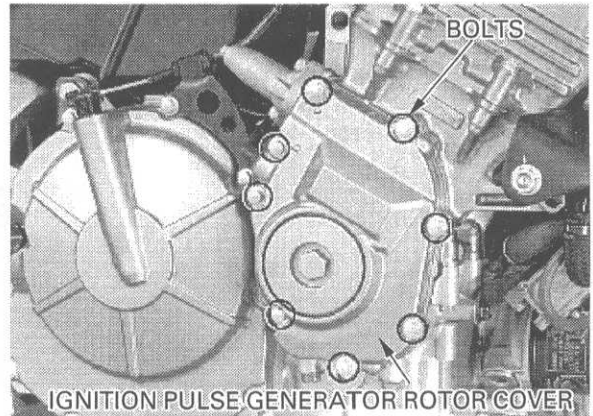

Remove the gasket and dowel pins.

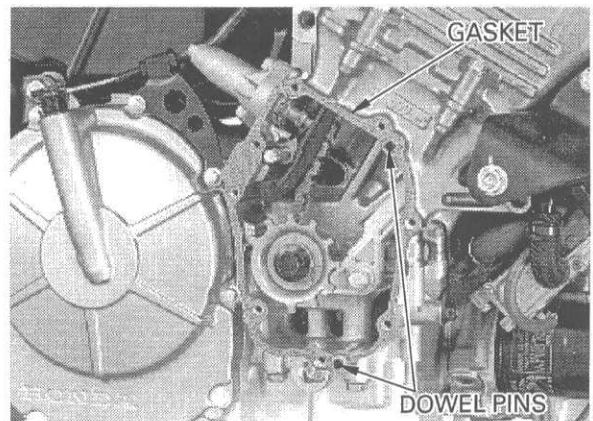

Remove the wire grommet from the cover.  
Remove the bolts and ignition pulse generator.

