
## **Reserve Tank Removal/Installation**

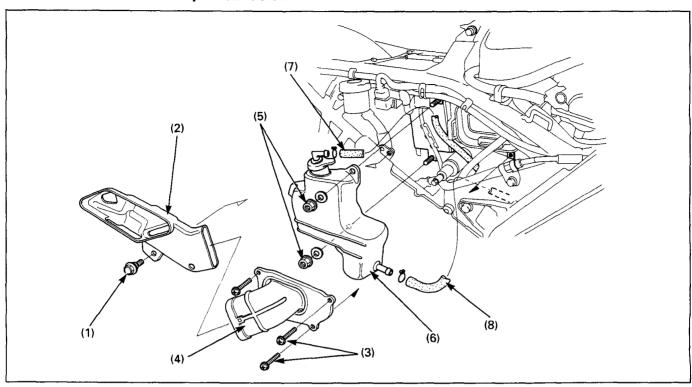

## **Requisite Service**

· Coolant draining/refilling

• Side cover removal/installation (page 2-3)

Procedure		Q'ty	Remarks
(1) (2) (3) (4)	Removal Order Intake duct bolt Intake duct Element cover screw Element cover	1 1 3 1	Installation is in the reverse order of removal.
(5) (6) (7) (8)	Reserve tank nut Reserve tank Reserve tank breather tube Siphon tube	2 1 1 1	