

▲ WARNING

• The fork cap is under spring pressure. Use care when removing it and wear eye and face protection.

NOTE

- Temporarily install the fork spring and fork cap, if the socket bolt turns together with the fork piston.
- Always replace oil seal with a new one.

Requisite Service

- Fork removal/installation (page 11-10)

Procedure		Q'ty	Remarks	
Disassembly Order				
(1)	Fork tube cap	1	Hold the fork damper rod look nut, then remove the fork cap.	
(2)	O-ring	1		
(3)	Seat stopper	1		
(4)	Spring seat	1		
(5)	Spring collar	1		
(6)	Spring seat	1		
(7)	Fork spring	1		Pour out the fork oil after removing the fork spring.
(8)	Dust seal	1		
(9)	Stopper ring	1		CAUTION: • Do not scratch the inner fork tube sliding surface.
(10)	Fork socket bolt	1		
(11)	Sealing washer	1		
(12)	Fork damper assembly	1		
(13)	Fork tube	1		
(14)	Oil lock piece	1		
(15)	Oil seal	1	Remove them from the fork tube.	
(16)	Back-up ring	1		
(17)	Slider guide bushing	1		
(18)	Fork tube bushing	1	Do not remove it, unless it is necessary to replace with a new one.	
(19)	Fork slider	1		
(20)	Protector	1		
Fork Damper Disassembly Order				
(21)	Damper rod look nut	1		
(22)	Stopper ring	1		
(23)	Bottom piece	1		
(24)	Damper rod	1		
(25)	Rebound spring	1		