

NOTE

- Note the location and direction of the caliper pistons, dust seals and piston seals.
- Replace the caliper piston seals and dust seals as a set.

Requisite Service

- Rear brake caliper removal/installation (page 13-12)

| Procedure | | O'ty | Remarks |
|-----------|-------------------------------|------|--|
| | Disassembly Order | | Assembly is in the reverse order of disassembly. |
| (1) | Caliper bracket | 1 | |
| (2) | Brake pad spring | 1 | |
| (3) | Brake pad retainer | 1 | |
| (4) | Caliper body B mounting bolt | 3 | |
| (5) | Retainer | 1 | |
| (6) | Caliper body B | 1 | |
| (7) | Caliper piston (O.D. 27.0 mm) | 1 | |
| (8) | Dust seal | 1 | Apply silicone grease to the new dust seals. |
| (9) | Piston seal | 1 | |
| (10) | Caliper piston (O.D. 22.6 mm) | 1 | |
| (11) | Dust seal | 1 | |
| (12) | Piston seal | 1 | |
| (13) | Caliper piston (O.D. 25.4 mm) | 1 | |
| (14) | Dust seal | 1 | |
| (15) | Piston seal | 1 | |
| (16) | Bracket pin boot | 1 | |
| (17) | Bracket pin bolt | 1 | |
| (18) | Caliper pin boot | 1 | |
| (19) | Caliper pin bolt | 1 | |