


Proportional Control Valve Removal/Installation

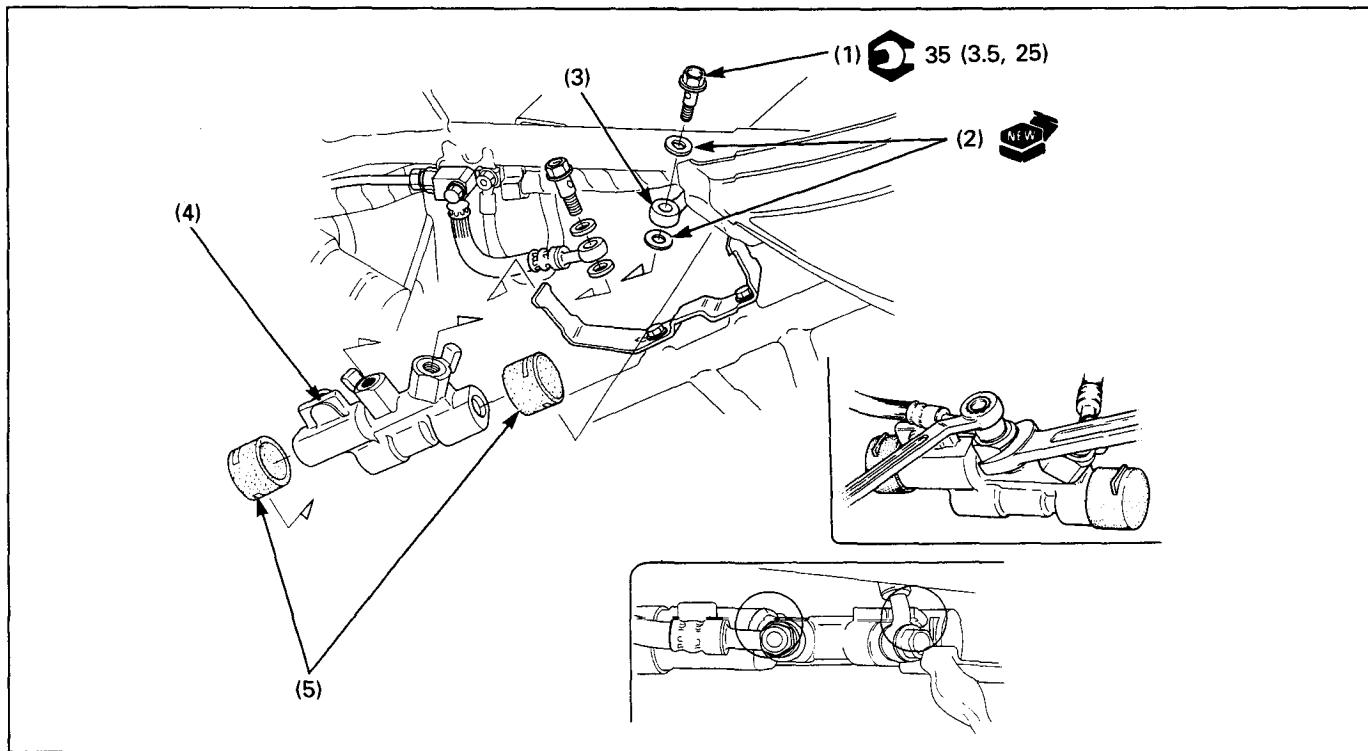

CAUTION

- Avoid spilling brake fluid on painted, plastic, or rubber parts. Place a rag over these parts whenever the system is serviced.
- When removing the oil bolt, cover the end of the brake hose to prevent contamination.
- Do not disassemble the proportional control valve.

Requisite Service

- Seal cowl removal/installation (page 2-4)
- Brake system air bleeding (page 13-25)

Procedure		Q'ty	Remarks
(1)	Removal Order Oil bolt	2	Installation is in the reverse order of removal. Hold the proportional control valve using a open end wrench, then loosen or tightening the bolts.
(2)	Sealing washer	4	
(3)	Brake hose eyelet joint	2	
(4)	Proportional control valve assembly	1	
(5)	Rubber suspension	2	