

# 20. Troubleshooting

<b>Engine Does Not Start Or Is Hard To Start</b>	<b>20-1</b>	<b>Poor Performance At High Speed</b>	<b>20-4</b>
<b>Engine Lacks Power</b>	<b>20-2</b>	<b>Poor Handling</b>	<b>20-4</b>
<b>Poor Performance At Low And Idle Speeds</b>	<b>20-3</b>		

## Engine Does Not Start Or Is Hard To Start

