

Index

AC Generator Cover Removal/Installation	14-9	Headlight Removal/Installation.....	17-5
Air Cleaner	3-5	Ignition Coil	15-9
Air Cleaner Housing Removal/ Installation	5-3	Ignition Pulse Generator Inspection.....	15-10
Alternator	14-8	Ignition Pulse Generator Cover Removal/Installation	15-11
Alternator Shaft Removal/Installation	10-16	Ignition Switch Removal/Installation	17-6
Balancer Disassembly/Assembly	10-5	Ignition Timing	15-10
Removal/Installation	10-2	Left Handlebar Removal/Installation	11-4
Battery Removal/ Installation	14-5	Left Front Brake Caliper Removal/Installation	13-6
Body Panel Locations	2-2	Lower Fairing	2-6
Brake Pad Wear	3-12	Lubrication System Diagram	4-2
System	3-13	Lubrication & Seal Points	1-20
Bulb Replacement	17-3	Mainshaft Disassembly/Assembly	10-10
Cable & Harness Routing	1-23	Maintenance Schedule	3-4
Camshaft Removal/Installation	8-4	Model Identification	1-2
Carburetor Combination	5-12	Oil Cooler Removal/Installation	4-3
Disassembly/Assembly	5-8	Oil Pump Disassembly/Assembly	4-6
Removal/Installation	5-4	Removal/Installation	4-4
Separation	5-6	Operating Principles	19-2
Synchronization.....	3-8	PCV(Proportional Control Valve)	19-5
Charging System Inspection	14-6	Pilot Screw Adjustment	5-14
Clutch Installation	9-8	Pivot Cover	2-5
Clutch Master Cylinder Disassembly/Assembly	9-5	Pivot Under Cover	2-6
Clutch Master Cylinder Removal/Installation	9-4	Poor Handling	20-4
Clutch Removal	9-6	Poor Performance At High Speed	20-4
Clutch Slave Cylinder Disassembly/Assembly	9-3	Poor Performance At Low And Idle Speeds	20-3
Clutch Slave Cylinder Removal/Installation	9-2	Proportional Control Valve Removal/Installation	13-24
Combination Meter Disassembly/Assembly	17-8	Radiator Disassembly/Assembly	6-5
Removal/Installation	17-7	Removal/Installation	6-4
Countershaft Disassembly/Assembly.....	10-12	Rear Brake Caliper Disassembly/Assembly	13-14
Crankcase Combination	10-22	Removal/Installation	13-12
Separation	10-6	Rear Brake Pad Replacement	13-5
Crankshaft Bearing Replacement	10-20	Rear Fender	2-5
Crankshaft Removal/Installation	10-18	Rear Master Cylinder Disassembly/Assembly	13-20
Cylinder Head Cover Removal/Installation	8-2	Removal/Installation	13-18
Cylinder Head Disassembly/Assembly	8-12	Rear Wheel Disassembly/Assembly	12-4
Removal/Installation.....	8-10	Removal/Installation	12-2
Cylinder/Piston Removal/Installation	8-14	Regulator/Rectifier	14-7
Drive Chain	3-10	Reserve Tank Removal/Installation	6-6
Drive Sprocket Removal/Installation	7-2	Right Front Brake Caliper	
Dual Combined Brake System	19-1	Removal/Installation	13-8
Engine Does Not Start Or Is Hard To Start	20-1	Right Handlebar Removal/Installation.....	11-2
Engine Installation	7-6	Rocker Arm/Cam Chain Tensioner	
Engine Lacks Power	20-2	Removal/Installation	8-8
Engine Removal	7-4	Seat	2-3
Exhaust System	2-10	Seat Cowl	2-4
Fork Assembly	11-14	Secondary Master Cylinder	
Disassembly	11-12	Disassembly/Assembly	13-22
Removal/Installation.....	11-10	Removal/Installation	13-21
Front Brake Caliper Disassembly/Assembly	13-10	Service Access Guide	3-2
Front Brake Pad Replacement	13-4	Service Information	
Front Master Cylinder		(Brake System)	13-1
Disassembly/Assembly	13-17	(Charging System/Alternator)	14-1
Removal/Installation	13-16	(Clutch/Gearshift Linkage)	9-1
Front Wheel Disassembly/Assembly	11-8	(Cooling System)	6-1
Removal/Installation	11-6	(Crankshaft/Transmission)	10-1
Fuel Tank	2-9	(Cylinder Head/Cylinder/Piston).....	8-1
Gearshift Linkage Removal/Installation	9-12	(Electric Starter).....	16-1
General Safety	1-1	(Engine Removal/Installation)	7-1
Headlight Aim	3-14	(Frame/Body Panels/Exhaust System)	2-1