

RIDER SEAT


REMOVAL/INSTALLATION

Remove the two seat mounting pan screws and collars.

Remove the seat by pulling it backward.

Install the seat hooks under the seat bracket on the seat rail.

Install the collars and seat mounting pan screws, tighten the screws.

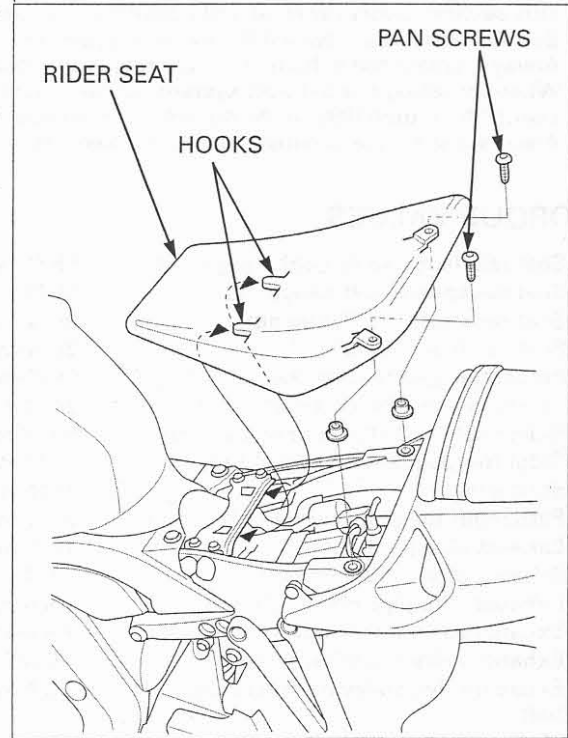

PASSENGER SEAT

REMOVAL/INSTALLATION

Unhook the passenger seat lock using the ignition key.

Remove the passenger seat by pulling it forward.

Install the passenger seat in the reverse order of removal.

